



3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100

techsupport@soundoffsignal.com
www.soundoffsignal.com

⚠ WARNING
This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.



**SINGLE EXTERIOR
DECK / GRILLE
WARNING SYSTEM
ASSEMBLY INSTRUCTIONS
EPRDSGS1(x)**

WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

BRACKET MOUNTING

Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the bracket

1. Locate flat mounting location for Predator Light Bracket.
2. When position of bracket is determined use supplied template for hole locations.
3. Drive in Customer Supplied Hex Head screws. Leave about a 1/16" space between the mounting surface and underside of screw head.
4. Place Light over screws using the holes in brackets and slide to the right to lock the brackets underneath the head of the bolts.
5. Using a open-end wrench, tighten the hex head bolts down tight to secure the light to the mounting surface.
6. Adjust angle of the light to best suit your application by loosening the 2 nuts on either end of the light.
7. After the Predator is set to the desired angle, tighten the 2 nuts on either end of the light. DO NOT OVER TIGHTEN nuts as damage to bracket or light can occur. Tighten nut until snug plus 1/8 turn.
8. Make electrical connections using the following instructions.

TECHNICAL SPECIFICATIONS	
Overall Dimensions:	4.27"x2.35"x1.75"
Flash Patterns:	33
Input Voltage:	10-16Vdc
Current Consumption:	1.1 Amps*
Light Sync Technology:	Yes
Operating Temperature:	-20° to +65° C

*Pattern Dependent

NOTE: The PREDATOR is a factory sealed unit that CANNOT be serviced in the field. Any attempt to gain access to the PREDATOR unit will most likely cause permanent damage and void its warranty.


IMPORTANT: DO NOT connect this device to a strobe power supply.

OPERATING INSTRUCTIONS


See setup procedure on second page. The single Predator comes equipped with an internal flasher with 33 user selectable patterns that can be synchronized either alternating or simultaneous with up to three other lights. It can also be put into slave mode and driven through an external flasher.

1. Connect the PREDATOR BLACK wire to a good, convenient ground.
2. Connect the PREDATOR RED wire to one side of a user supplied on/off switch. Connect the other side of the switch, through a 5Amp fuse, to a source of +10-16Vdc.

Place Light over screws using keyway in brackets

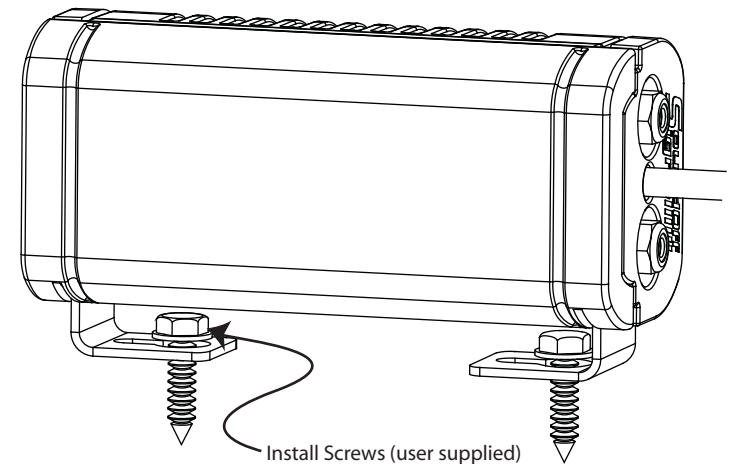

Slide Light to the Right and tighten screws using box end wrench

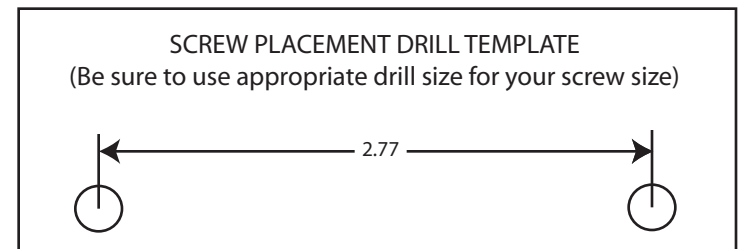



3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100
techsupport@soundoffsignal.com
www.soundoffsignal.com

⚠ WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.



SINGLE EXTERIOR DECK / GRILLE WARNING SYSTEM ASSEMBLY INSTRUCTIONS EPRDSGS1(x)

Predator Sync Configuration Instructions IMPORTANT! A MAXIMUM OF 4 SINGLE LIGHTS CAN BE SYNCED TOGETHER

1. Set ID#
 - a. Identify which pattern and sequence you want and look up ID# settings below.
 - b. Connections
 - i. RED: +12Vdc
 - ii. WHT: +12Vdc (Note: you will need to disconnect after power is applied)
 - iii. BLK: Ground
 - c. Apply power to unit
 - d. Without disconnecting power from unit, disconnect WHT wire
 - e. Momentarily connect WHT to Ground to change ID #
 - i. Identify ID# by number of sequential flashes
 - ii. Possible ID#s: 1 – 4
 - f. Disconnect power from unit to get out of ID mode.
2. Set Pattern
 - a. Reapply power to units.
 - b. Once all Light Head ID#s are configured, make sure all lights are flashing the same pattern
 - c. Connect corresponding colored wires of all units together: RED to RED, etc.
 - d. Change Pattern
 - i. Momentarily connect WHT wires to Ground
 - ii. Observe pattern change on all lights connected
 - e. Insulate all wires by taping with electrical tape
3. Connect Master Switch for Application
 - a. **IMPORTANT!** Ensure WHT Pattern/Sync Wires are tied together

1 LIGHT

Single Light Operation: Follow the ID Selection steps and set the PREDATOR to ID#1 if it is not already. NOTE: Steady Burn is produced for patterns 9 & 10 in Single Operation.

2 LIGHTS

ALTERNATING: To obtain Alternating patterns, follow the ID SELECTION steps and set one PREDATOR to ID#1 and the other to ID#3. Then proceed to the PATTERN SELECTION steps.

SIMULTANEOUS: To obtain Simultaneous patterns, follow the ID SELECTION steps and set both PREDATOR lights to ID#1. Then proceed to PATTERN SELECTION steps.

4 LIGHTS

X-Pattern: To obtain X-patterns, follow the ID SELECTION steps and set one of the four PREDATOR lights to ID#1, one to ID#2, one to ID#3, and one to ID#4. Then proceed to PATTERN SELECTION steps. NOTE: Be sure to mount each PREDATOR in the correct placement based on ID#.

PATTERN SELECTION

1. Disconnect WHITE wire from any connections if applicable.
2. Turn PREDATOR ON.
3. Momentarily touching and removing the WHITE wire(s) to ground will advance the PREDATOR to the next flash pattern. Touching and removing the White wire for more than a few seconds will allow you to change the PREDATOR to the previous pattern. See flash pattern table. Continuing to touch and remove the WHITE wire(s) to ground will allow you to scroll through the pattern list. After pattern #33 is reached the list will start over again at pattern #1.

NOTE: The PREDATOR is equipped with flash pattern memory. Once you have selected a pattern the PREDATOR will always activate to that pattern every time the unit is turned on. Tape up and secure WHITE wire so that it will not accidentally change your selected pattern

PATTERN RESET

1. Remove power.
2. Place WHITE (sync) wire to ground.
3. With sync wire grounded, re-power RED wire.
4. Maintain for one second (light will dim).
5. Remove power and ground (pattern 1 set)..

X-Pattern Sequence

ID#1 > ID#4 > ID#2 > ID#3

X-Pattern Light Head Placement

ID#4	ID#2
ID#3	ID#1

SLAVE MODE

The PREDATOR is capable of being activated through the use of a user supplied flasher by putting it in slave mode.

1. Permanently connect the PREDATOR WHITE and BLACK wire to a good, convenient ground.
2. Connect the PREDATOR RED wire, through a 5Amp fuse, to the output of a +10-30Vdc switching flasher.

NOTE: The PREDATOR is a factory sealed unit that CANNOT be serviced in the field. Any attempt to gain access to the PREDATOR unit will most likely cause permanent damage and void its warranty.

FLASH PATTERNS for SINGLE HEAD EXTERIOR PREDATOR (EPRDSGS1(x))

#	Pattern Name	1 Light	Alternating 2 Lights	Simultaneous 2 Lights	X-Pattern 4 Lights	Flashes/ Minute
1	Quint	X	X	X		70
2	Warp	X	X	X		350
3	Inter-Cycle Flash	X	X			
4	Double Flash	X	X	X		70
5	Quad Flash	X	X	X		80
6	PowerPulse™	X	X	X		180
7	RoadRunner™	X	X	X		113
8	Q-Switch™	X	X			
9	RoadRunner™ Steady Burn	X	X			113
10	Quad Steady Burn	X	X			80
11	E-Ideal Single Flash	X	X	X		200
12	E-Ideal Double Flash	X	X	X		146
13	Quad2 Flash	X	X	X		67
14	Double2 Flash	X	X	X		95
15	X-Warp				X	
16	X-Double				X	
17	PowerRunner	X	X	X		
18	LCR Quint	X	X	X		
19	Warp³	X	X	X		
20	Ultra Warp	X	X	X		545
21	Thunder and Lightning	X	X			
22	LiteSpeed	X	X	X		85
23	SuperSonic	X	X	X		170
24	LCR LiteSpeed	X	X	X		
25	Super Sonic Ultra	X	X	X		
26	Tempo Shift	X	X	X		
27	TempoShift Warp	X	X	X		67
28	SBE²	X	X	X		200
29	C²	X	X	X		176
30	U²	X	X	X		
31	UltraGlow	X	X	X		
32	Cyclone	X	X	X		
33	Chameleon	X	X	X		