

GHOST™

by SoundOff Signal

SINGLE GHOST™ LED SURFACE MOUNT WARNING LIGHT

EGHST2(x) - Black

EGHST2(x)C - Chrome

EGHST2(x)W - White



Important Information:

- Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to your vehicle Owner's Manual for the location of any air bag deployment zones.
- DO NOT connect this device to a strobe power supply. This product is self-contained and does not require an external power supply.

INSTALLATION:

Establish a position on the vehicle. Use the gasket (provided) as a template to drill $\varnothing 1/2$ " wire hole and pilot holes for mounting screws. Note: pilot holes are 4-7/8" on center. **Caution: Do not stretch gasket as this may change the required hole spacing.**

OPERATION:

WIRE CONNECTIONS

See setup procedure on second page. The single GHOST™ comes equipped with an internal flasher with 33 user selectable patterns that can be synchronized either alternating or simultaneous with up to three other lights. It can also be put into slave mode and driven through an external flasher.

1. Connect the GHOST™ BLACK wire to a good, convenient ground.
2. Connect the GHOST™ RED wire to one side of a user supplied on/off switch. Connect the other side of the switch, through a 5Amp fuse, to a source of +10-30Vdc.

NOTE: The GHOST™ is a factory sealed unit that CANNOT be serviced in the field. Any attempt to gain access to the GHOST™ unit will most likely cause permanent damage and void its warranty.

TECHNICAL SPECIFICATIONS

Overall Dimensions:	5.65"L x 1.06"H x 1.8"D
Input Voltage Range:	10-30Vdc
Current Consumption:	< 1 amp
# of LEDs:	6 Generation 3 LEDs
Operating Temperature:	-40° to +65° C
# of Flash Patterns	33

WIRE HOOK-UP TABLE

WIRE COLOR:	CONNECT TO:
RED	+10-30Vdc
BLACK	Ground (-)
WHITE	Pattern Select

⚠ WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product please visit our website at www.soundoffsignal.com and select the "Warranty & Returns" link along the left column of our home page. If you have questions regarding this product please contact Technical Services, Monday - Friday, 8 am to 5 pm at 1.800.338.7337, press #4 to skip the automated message. Questions or comments that do not require immediate attention may be emailed to techsupport@soundoffsignal.com.

1.800.338.7337. / www.soundoffsignal.com / Thank you for trusting us with your safety!

SINGLE GHOST™ LED SURFACE MOUNT WARNING LIGHT

1 SINGLE LIGHT

Follow the ID selection steps and set the GHOST™ to the following ID:

- Alternating (default): ID#1 or ID#3. (includes cycle patterns and steady burn patterns)
- Simultaneous: ID#2 or ID#4. (both lights will flash together regardless of pattern)

2 SINGLE LIGHTS

Follow the ID selection steps and set the GHOST™ to the following ID:

IMPORTANT: Make sure both lights flash the same pattern!

- Both assemblies simultaneous with individual lights alternating.
- Example: Driver/Passenger sim; Dr.(left alt right) Pass.(left alt right)
- Set both GHOST™ Assemblies to ID#1
- Both assys. alternating with individual lights alternating.
- EX: Dr./Pass. alt; Dr.(left alt. right.) Pass.(right alt. left)
- Set one GHOST™ to ID#1 and the other to ID#3
- Both assys. alternating with individual lights simultaneous
- EX: Dr./Pass. alt; Dr.(left sim left) Pass.(right sim right)
- Set one GHOST™ to ID#2 and the other to ID#4
- Both assys. simultaneous with individual lights simultaneous.
- EX: Dr./Dr. sim; Dr.(left sim left) Pass.(right sim right)
- Set both GHOST™ housings to ID#2

X-PATTERN - To obtain X-Patterns, follow the ID SELECTION steps and set one of the four GHOST™ lights to ID#1, one to ID#2, one to ID#3, and one to ID#4. Then proceed to the PATTERN SELECTION steps.

NOTE: Be sure to mount each GHOST™ in the correct placement based on ID#.

PATTERN SELECTION

1. Disconnect WHITE wire from any connections if applicable.
2. Turn GHOST™ ON.
3. Momentarily touching and removing the WHITE wire(s) to ground will advance the GHOST™ to the next flash pattern. Touching and removing the White wire for more than a few seconds will allow you to change the GHOST™ to the previous pattern. See flash pattern table. Continuing to touch and remove the WHITE wire(s) to ground will allow you to scroll through the pattern list. After pattern #33 is reached the list will start over again at pattern #1.

X-PATTERN SEQUENCE **X-PATTERN LIGHT HEAD PLACEMENT**
ID#1>ID#4>ID#2>ID#3

ID#4	ID#2
ID#3	ID#1



NOTE: The GHOST™ is equipped with flash pattern memory. Once you have selected a pattern the GHOST™ will always activate to that pattern every time the unit is turned on. Tape up and secure WHITE wire so that it will not accidentally change your selected pattern.

GHOST™ Sync Configuration Instructions
IMPORTANT! A MAXIMUM OF 2 DUAL LIGHTS CAN BE SYNCED TOGETHER

1. Set ID#
 - a. Identify which pattern and sequence you want and look up ID# settings at left.
 - b. Connections
 - i. RED: +10-30Vdc
 - ii. WHT: +10-30Vdc (Note: you will need to disconnect after power is applied)
 - iii. BLK: Ground
 - c. Apply power to unit
 - d. Without disconnecting power from unit, disconnect WHT wire
 - e. Momentarily connect WHT to Ground to change ID #
 - i. Identify ID# by number of sequential flashes
 - ii. Possible ID#s: 1 – 4
 - f. Disconnect power from unit to get out of ID mode.
2. Set Pattern
 - a. Reapply power to units.
 - b. Once all Light Head ID#s are configured, make sure all lights are flashing the same pattern.
 - c. Connect corresponding colored wires of all units together: RED to RED, etc.
 - d. Change Pattern
 - i. Momentarily connect WHT wires to Ground
 - ii. Observe pattern change on all lights connected
 - e. Insulate all wires by taping with electrical tape
3. Connect Master Switch for Application
 - a. IMPORTANT! Ensure WHT Pattern/Sync Wires are tied together

SLAVE MODE

The GHOST™ is capable of being activated through the use of a user supplied flasher by putting it in slave mode.

1. Permanently connect the GHOST™ WHITE and BLACK wire to a good, convenient ground.
2. Connect the GHOST™ RED wire, through a 5Amp fuse, to the output of a +10-30Vdc switching flasher.

PATTERN RESET

1. Remove power
2. Place WHITE (sync) wire to ground
3. With sync wire grounded, re-power RED wire
4. Maintain for one second (light will dim)
5. Remove power and ground (pattern 1 set)

Flash Patterns					
Pattern Name	1 Light	Alternating 2 Lights	Simultaneous 2 Lights	X-Pattern 4 Lights	F.P.M. (Flashes / Minute)
1. Quint	x	x	x		70
2. Warp	x	x	x		350
3. Inter-Cycle Flash	x	x			
4. Double Flash	x	x	x		70
5. Quad Flash	x	x	x		80
6. PowerPulse™	x	x	x		180
7. RoadRunner™	x	x	x		113
8. Q-Switch™	x	x			
9. RoadRunner™ Steady Burn	x	x			113
10. Quad Steady Burn	x	x			80
11. E-Ideal Single Flash	x	x	x		200
12. E-Ideal Double Flash	x	x	x		146
13. Quad2 Flash	x	x	x		67
14. Double2 Flash	x	x	x		95
15. X-Warp				x	
16. X-Double				x	
17. PowerRunner	x	x	x		
18. LCR Quint	x	x	x		
19. Warp ³	x	x	x		
20. Ultra Warp	x	x	x		545
21. Thunder & Lightning	x	x			
22. Lite Speed	x	x	x		85
23. SuperSonic	x		x		170
24. LCR Lite Speed	x	x	x		
25. SuperSonic Ultra	x	x	x		
26. Tempo Shift	x	x	x		
27. Tempo Shift Warp	x	x	x		
28. SBE2	x	x	x		67
29. C ²	x	x	x		200
30. U ²	x	x	x		176
31. Ultra Glow	x	x	x		
32. Cyclone	x	x	x		
33. Chameleon	x	x	x		