



3900 Central Parkway  
 Hudsonville, MI 49426  
 toll free 800.338.7337  
 office 616.896.7100  
 techsupport@soundoffsignal.com  
 www.soundoffsignal.com

**WARNING:** Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.


**MOUNTING INSTRUCTIONS**

**Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the light or bracket. Use appropriate hardware for mounting.**




1. Make certain you have the correct bracket for your application by comparing the illustrations to the parts included in this kit.
2. For visor mounts remove the pivot or retaining clip (nearest to the review mirror) that attaches the visor to the head-liner.
3. Install the bracket in the orientation shown in the the appropriate illustration at right. **DO NOT TIGHTEN SCREWS UNTIL LIGHT IS LOCATED IN FINAL MOUNT POSITION.**
4. Attach the lights to the brackets as shown and adjust for final placement.

NOTE: Visor mount brackets are installed in pairs with the exception of the Dodge Charger which uses only one bracket. The Charger bracket is to be installed between the clip NEAREST THE REAR-VIEW MIRROR and the head-liner on either the driver's or passenger's side of the vehicle. This will place the bracket off-center of the light.

6. When final position of unit is obtained tighten screws. **DO NOT OVERTIGHTEN!**

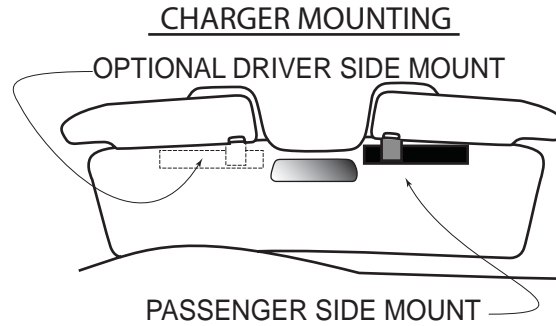

CROWN VIC, TAHOE, IMPALA MOUNTING

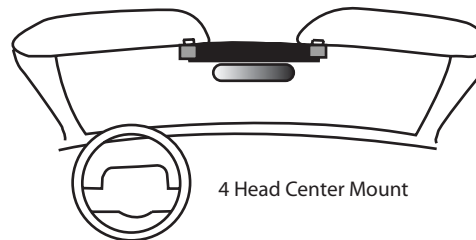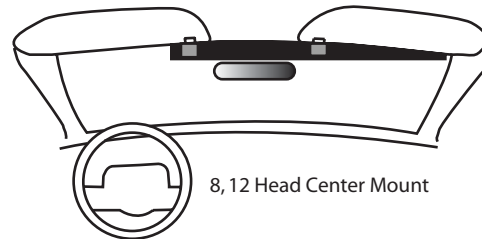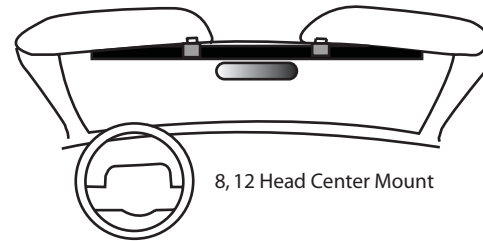

# UltraLITE



by SoundOff Signal

## UltraLITE VISOR AND DECK/DASH MOUNTS INSTALLATION INSTRUCTIONS PUL3M(xx)

VEHICLE SPECIFIC ILLUSTRATIONS

