




3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100
techsupport@soundoffsignal.com
www.soundoffsignal.com

LED3 LICENSE PLATE BRACKET

EL3SNBRK2LPH
EL3SNBRK2LPV

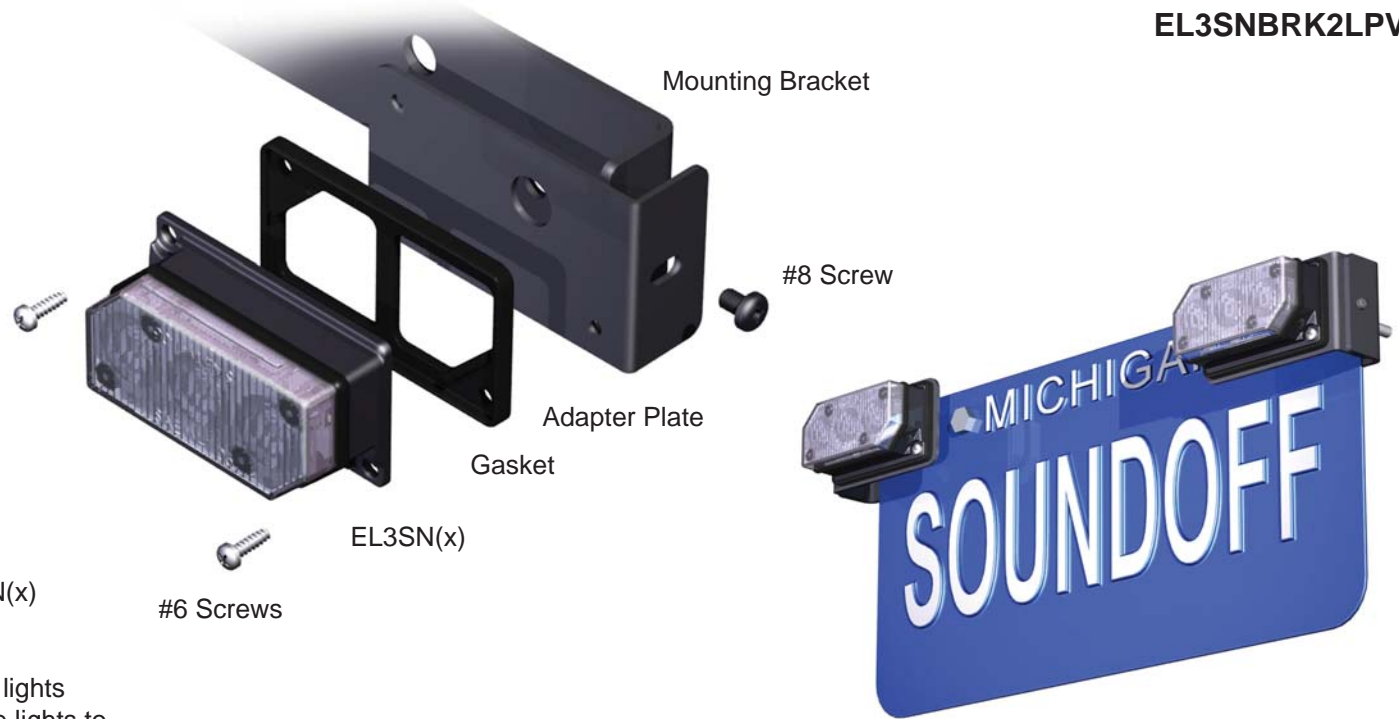

Tools Needed for Installation:

Screw driver.
Drill with 1/2" bit.

The SoundOff Signal license plate brackets are designed to fit under the rear license plate and support two LED3 single warning lights - EL3SN(x) (not included).

The EL3SNBRK2LPH is designed to mount the lights horizontally and the EL3SNBRK2LPV allows the lights to be mounted vertically.

INSTALLATION INSTRUCTIONS

1. Remove license plate from vehicle.
2. Determine whether you want to mount the light inward (toward the license plate) or outward (away from the license plate).
Note: when mounting the light inward make sure that state or local ordinances are not violated regarding visibility of license tabs, etc.
3. Determine location where you want the power cable to exit the vehicle and drill 1/2" hole for wire routing.
4. Screw LED3 (EL3SN(x)) to adapter plate shown using supplied #6 thread forming screws.
5. Screw adapter plate (with mounted LED3) to base mounting bracket using supplied #8 screws.
6. Route wires through hole created in step 3.
7. Fasten bracket with license plate on top to vehicle using license plate screws removed in step 1. Extra holes are provided for heavy duty mounting.
8. Wire the lights according to LED3 installation instructions.

EL3SNBRK2LPH
Mounted inward

EL3SNBRK2LPH
Mounted outward

EL3SNBRK2LPV
Mounted inward

EL3SNBRK2LPV
Mounted outward